

1












1

2

2


2

2

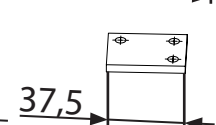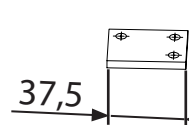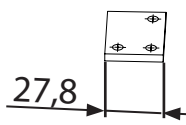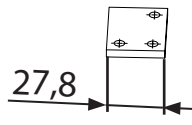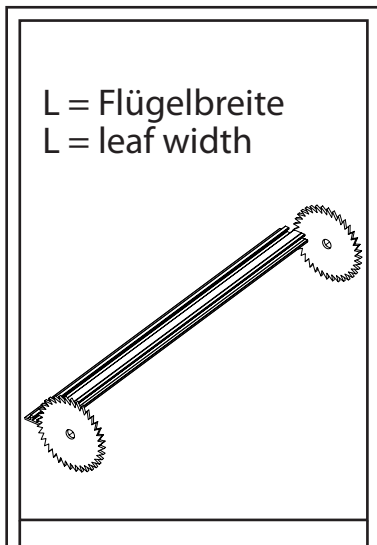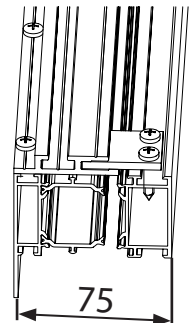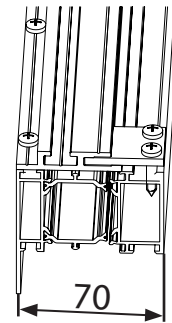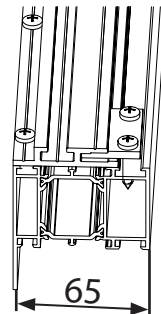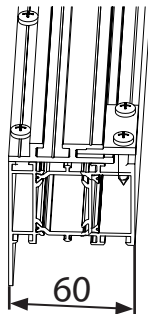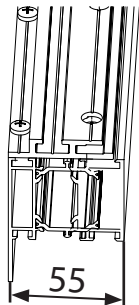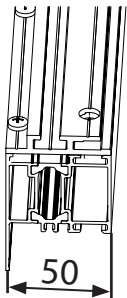


3 m

= A-7136970

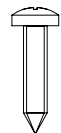


100 x
 DIN 7981 4,8x25

= A-7139080

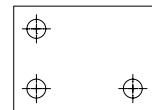


20 x


= A-8007240

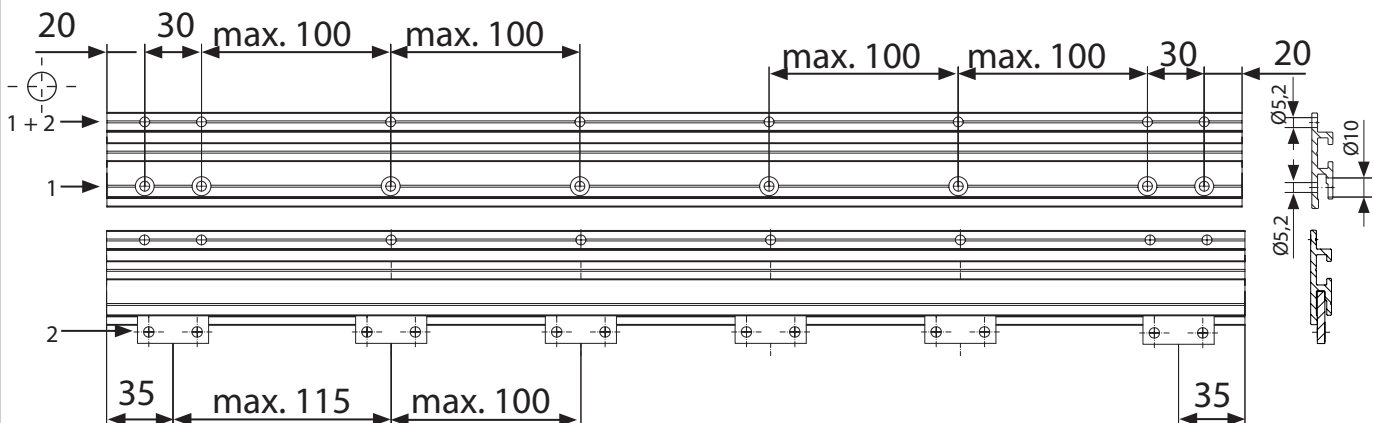

heavyMaster/Royal S65

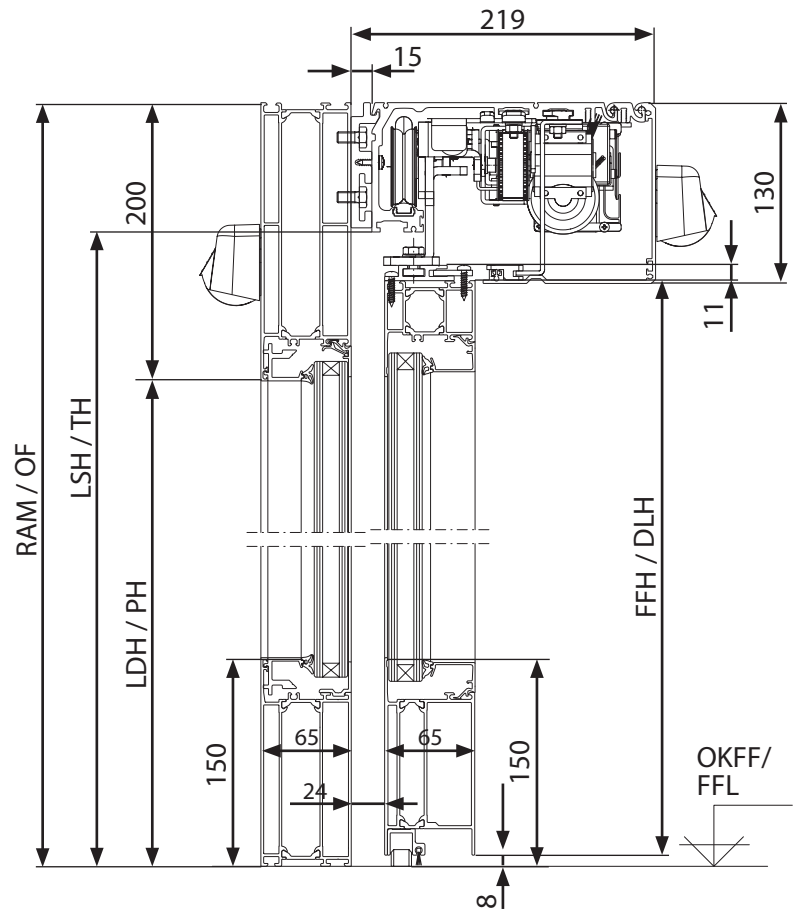

econoMaster/Royal S65

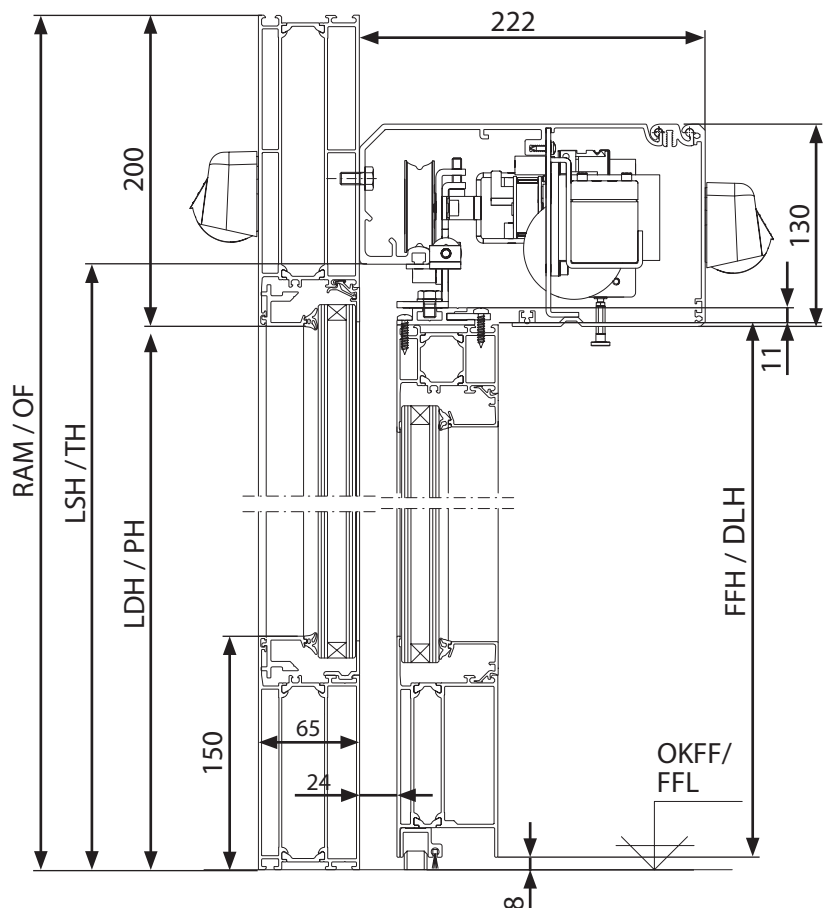

Legende:

- FFH Fahrflügelhöhe
- LDH Lichte Durchgangshöhe
- LSH Laufschienehöhe
- RAM Rahmenaußenmaß
- OKFF Oberkante Fertigfußboden

Key:

- DLH Door Leaf Height
- PH Passage Height
- TH Track Height
- OF Overall Framework Size
- FFL Finish Floor Level